

RTD Interface

Daikin Fault Codes with RealTime Fault Extensions

Issue 1.00.00

	Fault Code	RTD Code	Fault Description
Daikin Codes	A0	16688	Error of external protection device
	A1	16689	Defect of printed circuit board
	A3	16691	Malfunction of drain level control system
	A6	16694	Fan Motor Lock
	A7	16695	Malfunction of swing flap motor
	A9	16697	Malfunction of electronic expansion valve
	AH	16712	Dirty air filter
	AJ	16714	Faulty capacity setting
	AF	16710	Drain level above limit
	C4	17204	Malfunction of liquid pipe temperature sensor
	C5	17205	Malfunction of gas pipe temperature sensor
	C9	17209	Malfunction of return air temperature sensor
	CJ	17226	Malfunction of controller temperature sensor
	E0	17712	Actuation of safety device
	E1	17713	Defect of printed circuit board
	E3	17715	Actuation of high pressure switch
	E4	17716	Actuation of low pressure sensor
	E9	17721	Malfunction of electronic expansion valve
	F3	17971	Abnormal discharge pipe temperature
	H3	18483	High pressure switch failure
	H4	18484	Actuation of low pressure switch
	H9	18489	Malfunction of ambient air temperature sensor
	J1	18993	Malfunction of pressure sensor
	J3	18995	Malfunction of discharge pipe temperature sensor
	J5	18997	Malfunction of suction pipe temperature sensor
	J6	18998	Malfunction of heat exchanger temperature sensor
	JA	19009	Malfunction of discharge pipe pressure sensor
	JH	19016	Malfunction of oil line temperature sensor
	JC	19011	Malfunction of suction pipe pressure sensor
	L0	19504	Failure of inverter system
	L4	19508	Malfunction of inverter pcb overheat sensor
	L5	19509	Inverter over-current
	L6	19510	Compressor motor defect (inverter)
	L8	19512	Compressor overload (inverter)
	L9	19513	Compressor lock (inverter)
	LA	19521	Malfunction of power unit
	LC	19523	Malfunction of transmission between inverter pcb and control pcb
	P0	20528	Gas depletion
	P1	20529	Inverter over - ripple protection
	P4	20532	Malfunction of inverter pcb temperature sensor
	U0	21808	Refrigerant shortage
	U1	21809	Reversed phase connection or negative present
	U2	21810	Insufficient power supply
	U4	21812	Malfunction of transmission between indoor and outdoor units
	U5	21813	Malfunction of transmission between indoor unit and remote controller
	U7	21815	Malfunction of transmission between outdoor units
U8	21816	Malfunction of transmission between master and slave remote controllers	
U9	21817	Malfunction of transmission between indoor and outdoor units	
UA	21825	Excessive number of indoor units	
UH	21832	System not ready to run due to test mode being performed	
UC	21827	Duplicate DIII net address	
UE	21829	Malfunction of transmission between indoor unit and central control device	
UF	21830	Incompatible piping or wiring	

RTD Interface

Daikin Fault Codes with RealTime Fault Extensions

Issue 1.00.00

	Fault Code	RTD Code	Fault Description
RealTime Codes	0	0	Data Not Available
	--	255	No Fault
	V80	14384	V80: Waiting for unit data
	V84	14388	V84: Unit missing